



**How to connect/control** Clock by another microcontroller (Arduino for example) :

1. Disconnect level converter circuit by cutting traces marked with red cross or by removing components in the red dot circuit box.
2. Connect Arduino or other uC to the 3 contacts of the Rs232 5pins connector marked in the red dash lines box
3. Send serial interface data or commands as described in the Clock's User Manual

